

ASSEMBLY INSTRUCTION

SPECIFICATIONS

Max. Load Capacity	220 lb
Tray Material	Polypropylene
Handle Material	Steel
Wheel Material	Rubber, plastic
Wheel Size	16 in.
Wheel Type	Pneumatic wheel
Axle Diameter	0.63 in.
Tray Size (LxWxH)	37 x 24.4 x 9.8 in.

SAFETY

WARNING! Read and understand all instructions before using this tool. The operator must follow basic precautions to reduce the risk of personal injury and/or damage to the equipment.

Keep this manual for safety warnings, precautions, operating or inspection and maintenance instructions.


1. Use the correct tool for the job. This tool was designed for a specific function. Do not modify or alter this tool or use it for an unintended purpose.
2. Control the tool, personal movement and the work environment to avoid personal injury or damage to tool.
3. Do not operate any tool when tired or under the influence of drugs, alcohol or medications.
4. Wear impact safety goggles and protective clothing designed for the work environment and tool.

UNPACKING

WARNING! Do not operate the tool if any part is missing. Replace the missing part before operating. Failure to do so could result in a malfunction and personal injury.

Remove the parts and accessories from the packaging and inspect for damage. Make sure that all items in the Identification Key are included.

IDENTIFICATION KEY

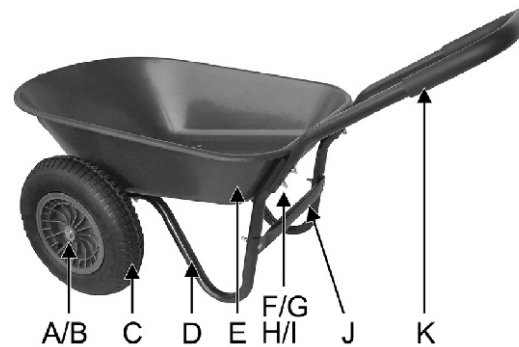

- | | |
|------------------------|------------------------|
| A M16 Washer (2) | H M8 Spring Washer (8) |
| B Cotter Pin (2) | I M8 Nut (8) |
| C Pneumatic Wheels (2) | J Leg Brace (1) |
| D Leg (2) | K Handle (1) |
| E Tray (1) | L Axle Spacers (2) |
| F M8 x 50 mm Bolt (8) | M Axle (1) |
| G M8 Flat Washer (8) | |

ASSEMBLY & INSTALLATION

Consult the Parts Breakdown diagram for assembly. Secure all bolts hand-tight only.

1. Insert an M8 x 50 mm bolt through an upper bolt hole on the rear of the tray (E) and hold it in place.
2. Position the open end of one leg (D) and push it over the protruding bolt. Push the handle (K) over the same bolt. Slide an M8 flat washer (G), M8 spring washer (H) and secure hand-tight with an M8 nut (I).
3. Insert a second bolt through the lower bolt hole and the leg. Secure with a washer, lock washer and nut.
4. Repeat with the other leg and handle end.
5. Place the tray upside down on the ground. You may need to place a support under the shorter end to raise it up.
6. Slide the axle (M) through the holders on each leg. Slide an axle spacer (L) on each end of the axle.
7. Slide a wheel (C) onto each end of the axle, then an M16 washer (A). Secure the tire by inserting a cotter pin (B) through the axle and twisting it to lock in place.
8. Position the leg brace (J) over the rear part of the legs and insert M8 x 50 mm bolts through the legs and brace. Secure each with a washer, spring washer and nut.
9. Turn the wheelbarrow on its side. Insert two M8 x 50 mm bolts through the tray's bottom and the legs. Secure each with a washer, spring washer and nut.
10. Retighten all bolts and nuts.
11. Flip the wheelbarrow over and rest on legs and wheels.
12. Inflate the tires to 25 psi.