

OakTM PLUS

25.50"H Freestanding Electric Fireplace User Instruction



CONSUMER SAFETY INFORMATION

Read this manual before installing and operating this appliance.

Failure to follow these instructions may result in electric shock, fire property, or personal injury.

Do not store or use gasoline or other flammable liquids in vicinity of this appliance.

IMPORTANT SAFETY INFORMATION!

Please Retain For Future Reference.

CAUTION

- Please read all instructions carefully before using this heater!
- Make sure that the voltage rating label on the type plate corresponds to your main voltage. If it was not seen, please contact with your retailer and do not connect it.
- Never use the appliance unsupervised when in use.
- If you have to leave even for a short moment, please stop the appliance.
- Keep out of reach of children and do not allow them to operate this appliance.
- This appliance is for household use only and in the way indicated in these instructions.
- From time to time check the cord for damages. Never use the appliance if the cord or any part of the appliance shows any signs of damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Make sure the connection cord does not touch any hot surfaces.



- **WARNING:** In order to avoid overheating, do not cover the heater.
- Keep the appliance at least 15cm (6 inches) from walls and any other things, to permit a good air circulation.
- **INDOOR use only! NEVER use this heater outdoors!** Doing so may result in electric shock!
- Do not use if you have wet hands.
- Never use the appliance on or near hot surfaces.
- Never move the appliance by pulling the cord.
- **AVOID FIRE!** Regularly inspect all air vents to make sure they are free from dust, lint, or other blockages. Unplug the unit and clean with a cloth **ONLY**.
- Before cleaning the appliance, make sure it is unplugged from the power and that it is completely cooled.
- Do not clean the appliance with abrasive chemicals. **DO NOT** rinse it or get it wet.
- **ALWAYS** store this heater in a dry place. **NEVER** use the fireplace if it has become wet.
- Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user or damage to the appliance.
- Never route the mains cable beneath carpet.
- Never use the heater to dry clothes or any other similar items.
- The heater must not be located immediately below a socket outlet.
- This heater must not be used with an extension lead.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

- Do not use this heater in the immediate surroundings of bathrooms, swimming pools, laundry rooms, or any other place where the heater could fall into a bathtub or pool, become damp or come in contact with water.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understood the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years old should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understood the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Regarding the instructions for replacing bulb, thanks to refer to the below paragraph of the manual.

OPERATING INSTRUCTIONS

 
Never cover the heater or obstruct the opening at the base of the heater, this could cause overheating and consequent risk of fire.

Never move the heater when it is operating, this could cause the bulb breakdown. Please turn the heater off if you want to move it.

When you turn the heater on for the first time you may notice a slight odor, this is harmless and will stop after a short amount of time.

Heater Control Panel

ND-189:

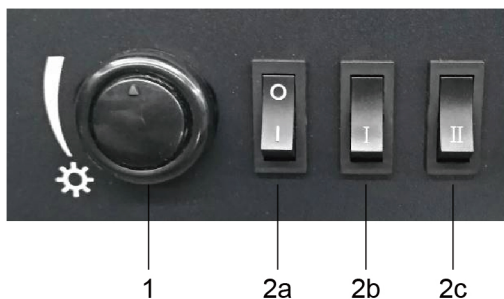

Insert plug into mains socket.

Select the desired functions:



- Switch (2a) - Switch ON/OFF for electricity supply to the heater and flame effect.
Note: This switch must be in the ON position for heating operation.
- Switch (2b) - Switch ON/OFF for 750W heat output.
- Switch (2c) - Switch ON/OFF for 1500W output with switch 2b.
Note: The flame effect can be operated with or without heat.
- Rotate thermostat control (1) clockwise or anti-clockwise to achieve desired room temperature.

FEATURES

- Freestanding style.
- Real log flame effect.
- Black cast effect finish.
- Flame effect can be used independently.
- 3D LED flame design.
- 2 heat settings option.
- Adjustable thermostat control.
- Safety thermal cut-off device.

PRODUCT DIMENSIONS

Model Number	Product Size		Glass Panel Size (For Flame Viewing)	
	A	B	C	D
ND-189	16.00" D	25.50" H	11.00" L	8.00" H

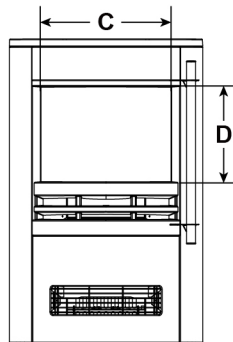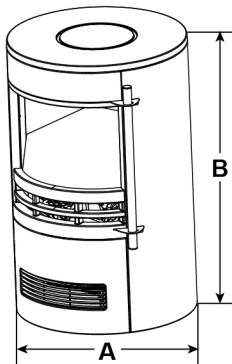  

TECHNICAL SPECIFICATION

Model Number	Electrical Supply	Rated Power	Lighting	Product Size
ND-189	120V~60Hz	750/1500W	LED bulbs	16.00"D X 25.50"H

SAFETY CUT-OFF

This appliance is fitted with a safety cut-off which will operate if the heater overheats (e.g. Due to blocked air vents). For safety reasons, the heater will NOT automatically reset.

To reset the appliance, disconnect the appliance from the mains supply for at least 30 minutes until it is completely cooled. Then reconnect the supply to the mains and switch on the appliance.

MAINTENANCE

Before cleaning or maintenance operation, switch off and unplug the appliance.

Ensure it is perfectly cooled.

To remove the dust, wipe the appliance with a cloth only.

Never use abrasives or detergents.

TROUBLESHOOTING

- **No light from the fuel effect:**

Possibly a bulb failure. Remove the faulty bulb as detailed above and check it in a table lamp that is known to work.

- **No heat or light:**

Check the wall socket by plugging in a known working appliance. If socket is functional, and cord or plug is suspected, have them checked by an electrician.

- **Light but no heat:**

Check that the thermostat on the heater is set above the ambient room temperature. Alternatively, the automatic cut-off may have engaged - see Safety Cut-Off section.

DISPOSAL

At the end of the product's serviceable life it should be disposed of thoughtfully and safely in accordance with local authority regulations. The plug should be removed from the power supply cord and the power cord cut from the heater.



Meaning of crossed –out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact with your local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

www.OakPlusLLC.com

E-mail: service@oakplusllc.com

US Toll Free: 888 - 357 - 7263



Oak Plus LLC

2704 Handley Ederville Rd Richland Hills, TX76118