


Assembly Instruction

4 TIER A FRAME BOOKCASE

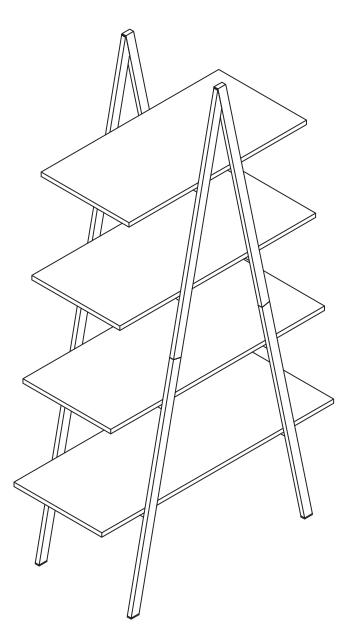

Carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface.

Get social with us and discover more about our products, tips and exclusive discounts!









PRE-ASSEMBLY PREPARATION

WARNING: MAXIMUM LOAD NOT EXCEED 45LBS ON SHELVES.


- **CAUTION:** Assembly will require at least 2 adults. DO NOT use power tools. Please inspect all items BEFORE assembly. If for any reason you need to return this item, please kindly return it in it's original packaging.
- WARNING!

1. DO NOT let any sharp objects touch or rub the surface of the product.

2. When assembling, do not let children play around the working area.


- 3. DO NOT tighten all bolts and screws completely until the entire unit has been assembled and set up.
- 4. DO NOT USE if this product become damaged, and/or components are broken or missing.
- **CARE AND CLEANING:** DO NOT scratch or chip the finish. DO NOT use abrasive chemicals for cleaning. Clean with mild soap on a soft rag. Rinse and dry thoroughly.
- **MAINTENANCE:** Please periodically chec-k all fittings and re-tighten as necessary.

Explosive View

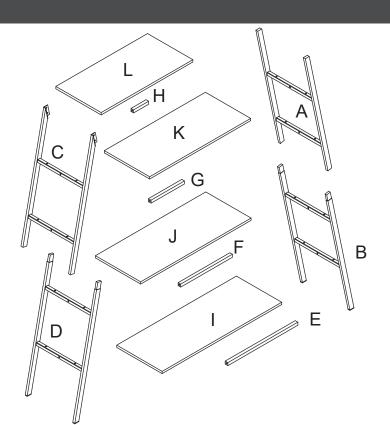

PART	DESCRIPTION	QTY	PART	DESCRIPTION	QTY
Α	RIGHT UPPER FRAME	1	G	MIDDIE SHORT SHELF CROSS BAR	1
В	RIGHT BOTTOM FRAME	1	Н	TOP CROSS BAR	1
C	LEFT UPPER FRAME	1	I	BOTTOM PANEL	1
D	LEFT BOTTOM FRAME	1	J	MIDDIE LONG SHELF PANEL	1
E	BOTTOM CROSS BAR	1	К	MIDDIE SHORT SHELF PANEL	1
F	MIDDIE LONG SHELF CROSS BAR	1	L	TOP PANEL	1




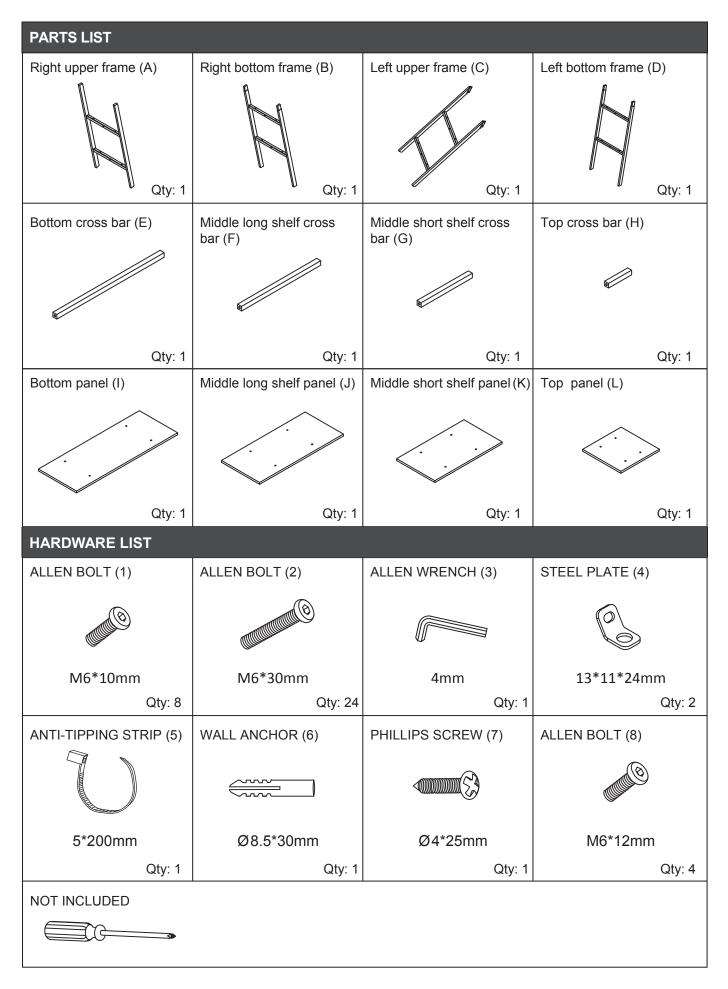

	REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY	
1	ALLEN BOLT M6*10mm	O	8PCS	
3	ALLEN WRENCH		1PC	

STEP 1


Attachright upper frame (A) on right bottom frame (B) with Allen bolts (1) and Allen wrench (3). Repeat this action for left upper Repeat this action for left upper (D).

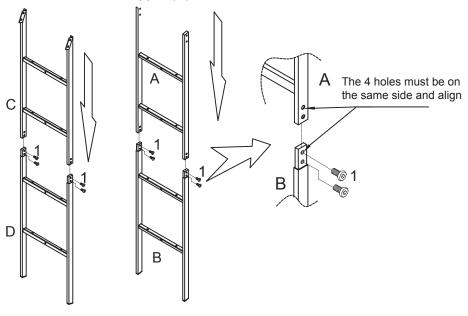

	REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY	
8	ALLEN BOLT M6*12mm	e a la companya de la	3PCS	
3	ALLEN WRENCH		1PC	

STEP 2


Slide the end of right upper frame (A) into the end of left upper frame (C) so the holes align. Secure the frame together with allen bolt (8) using allen wrench (3). Leave the bolt out of the top hole on the outside.

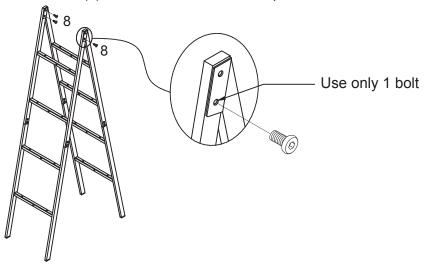

	REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY	
2	ALLEN BOLT M6*30mm		8PCS	
3	ALLEN WRENCH		1PC	

STEP 3


Attach top cross bar (H), middle short shelf cross bar (G), middle long shelf cross bar (F) and bottom cross bar (E) with allen bolt (2) using allen wrench (3). DO NOT fully tighten bolts until all cross bars are attached.

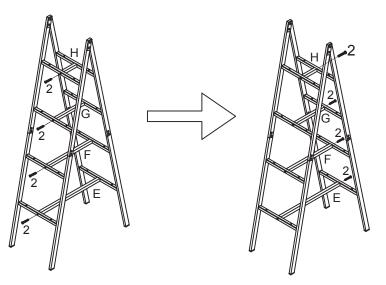

	REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY	
2	ALLEN BOLT M6*30mm		16PCS	
3	ALLEN WRENCH		1PC	

STEP 4


Attach top panel (L), middle short shelf panel (K), middle long shelf panel (J) and bottom panel (I) to the assembled frame as shown in the diagram with allen bolt (2) using allen wrench (3). Fully tighten all bolts.

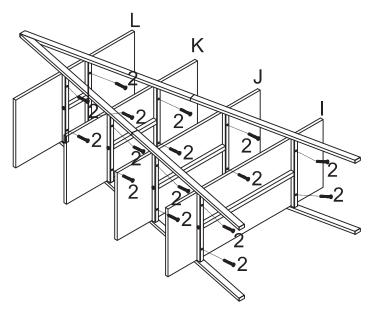

	REQUIRED HARDWARE IN THIS STEP			
NO.	DESCRIPTION	SKETCH	QTY	
8	ALLEN BOLT M6*12mm	<u>I</u>	1PC	
4	STEEL PLATE	C	1PC	
3	ALLEN WRENCH		1PC	

STEP 5

Attach steel plate (4) to the hole left open on the outside of the top frame with allen bolt (8) using allen wrench (3).

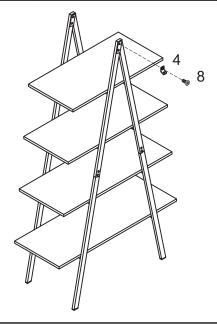

	REQUIRED HARDWARE IN THIS STEP				
NO.	DESCRIPTION	SKETCH	QTY		
4	STEEL PLATE		1PC		
5	ANTI-TIPPING STRIP	L	1PC		
6	WALL ANCHOR Ø8.5*30mm		1 PC		
7	PHILLIPS SCREW Ø 4*25mm		1 PC		

STEP 6

Place the shelves in the desired location. Mark the spot where the steel plate (4) meets the wall. Remove the shelves. Drill a hole at the marked location and insert the wall anchor (6). Attach the remaining steel plate (4) to wall anchor (6) using phillips screw (7). Return the shelves to the desired position and attach the steel plates (4) with anti-tipping strip (5). Assembly is now complete.

